

Service Call:

Remove Park Brake Interlock for Work Lights

Tools Required:

None

Model(s):

Any model with a Canview 4 switch panel.

Note: Not all units have programming capability. If you have any question, please contact Terex Utilities Technical Support at 1-844-Terex4U (1-844-837-3948) or utilities.service@terex.com.

Tech Tip Safety Rules



Danger

Failure to obey the instructions and safety rules in the appropriate Operator's Manual and Service Manual for your machine will result in death or serious injury. Many of the hazards identified in the operator's manual are also safety hazards when maintenance and repair procedures are performed.

Do Not Perform Maintenance Unless:

- You are trained and qualified to perform maintenance on this machine.
- You read, understand and obey:
 - manufacturer's instructions and safety rules
 - employer's safety rules and worksite regulations
 - applicable governmental regulations
- You have the appropriate tools, lifting equipment and a suitable workshop.

The information contained in this tech tip is a supplement to the service manual. Consult the appropriate service manual of your machine for safety rules and hazards.


Step 1

Press the “*Home/Select*” button until “*Settings*” appears on the right-hand side of the screen. Press the “*Settings*” button.




Step 2

Scroll through “*Settings*” until “*Control Settings*” is available. Once highlighted, press the “*Select*” button.

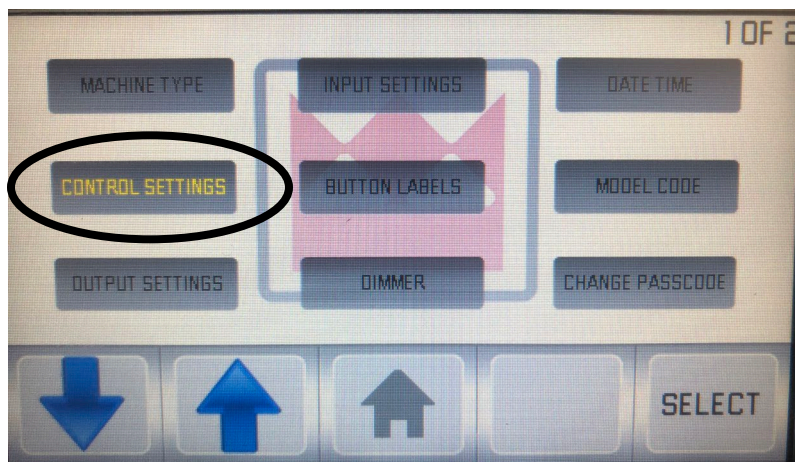

Step 3

Scroll through “Control Settings” until “Work Lights” is available. Once highlighted, press the “Select” button.

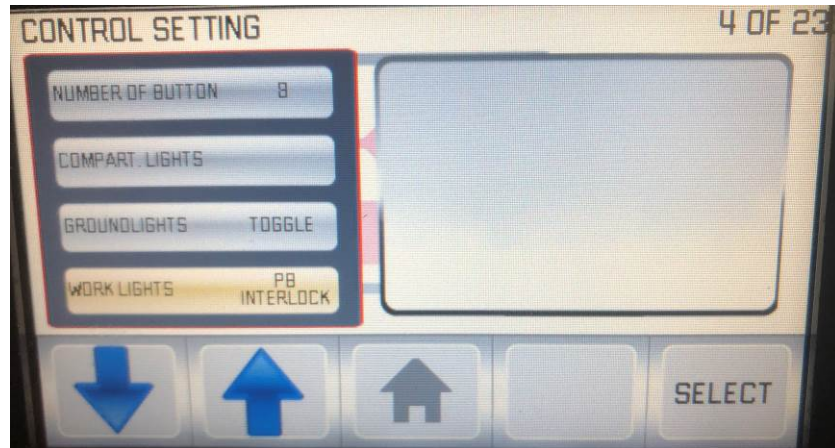

Step 4

Options will appear in the box on the right. Scroll through until “Toggle” is displayed. Press the “Select” button.



Step 5

Press the “*home/select*” button until the “*Function*” screen is shown again. Test the work light functionality to verify it is working without engaging the park brake ON.

